# **Heat Printing Placement Tips**




Though heat printing is ideal for customizing garments quickly and easily, finding the perfect placement and lining up graphics can be tricky. With our easy-to-follow guidelines for logos and graphics and a Hotronix<sup>®</sup> heat press, we'll help you get the professional results you want every time.


Placement information is intended as a guideline. Adjustments may be necessary based on size of garment.

### Jackets

Left Chest: 3.5" to 4"over from center's edge and 6" to 8" down from the seam of the shoulder.


Back: Depends on jacket and design size. 6" to 9" down from the seam of the collar to the design's center.





# **Polo Shirts**

7.5 to 9" down from the shoulder's left seam and 4 to 6" over from the center, in line with the collar meeting the shoulder seam. Reference with the center placket.



### **T-Shirts**

7.5" to 9" down from the shoulder's left seam and 4" to 6" over from the center.




Top of the design 3" to 3.5" down from the bottom of neck's edging.



## Jerseys

Top of the design 2" to 3" or 2.5" to 3" down from the bottom of neck's edging.

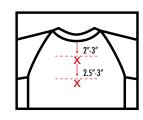

#### Hats



3.13"



Mid Profile: Front – 2"H x 5"W Side – 1"H x 2.50"W Back – 1"H x 2.75"W Bill – 2"H x 5.50"W



High Profile: Front – 2.25"H x 5"W Side – 1"H x 3.25"W Back – 1"H x 2.75"W Bill – 2"H x 5.50"W



Low Crown: Front -1.75"H x 4"W Side -1"H x 2.25"W Back -1"H x 2.75"W Bill -2"H x 5.50"W



Visor: Front – 1.50"H x 5"W Side – 1"H x 4"W Bill – 2"H x 5.50"W

