


APPLICATION INSTRUCTIONS FOR

To Order: StahlsID.com • 800.4.STAHLs • Fax: 800.346.2216
International: StahlsInternational.com • 586.772.5551
Canada: StahlsCanada.com • 800.521.5255

Pre-Sewn Distressed Letters & Numbers



PREHEAT BOTTOM PAD
Before application, Stahls' suggests lowering the top platen for 60 seconds.

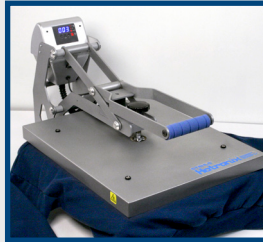

PREHEAT SUBSTRATE
for 10 seconds, prior to application, to remove moisture and wrinkles.



POSITION LETTERS and/or NUMBERS
and place cover sheet over design.



HEAT APPLY—
Temp: 365°F; 185°C
Time: 8-10 seconds
Pressure: medium
#4 on Hotronix®

Recommended Fabrics:

100% cotton
100% polyester
Poly/cotton blends
Poly/foam & cotton caps
Fleece

Due to the combination of fabrics, weaves, coatings and dyes used in the textile industry, Stahls' recommends and provides samples of our materials and medias for testing.

Accessories Required:

6 mil Heat Press Cover Sheet

Care Instructions:

Machine wash warm or cold using mild detergent. Do not bleach. Tumble dry low.

Important!:

When using, Stahls' suggests wiping off your cover sheet between applications to remove excess residue. This step will avoid any adhesive from transferring onto the next garment.

All technical information and recommendations are based on tests we believe to be reliable. However, we cannot guarantee performance for conditions not under manufacturer's control. Before using, please determine the suitability of product for its intended use. The user assumes all risk and liability whatsoever in connection with the use of this product. Seller's and manufacturer's only obligation shall be to replace such quantity of the product proved to be defective by manufacturer.

Hotronix are trademarks & ® trademarks of Stahls' ID Direct™ with one or more patents or patents pending.
© Stahls' ID Direct™ 2013 - All International Rights Reserved