

APPLICATION INSTRUCTIONS FOR


To Order: StahlsID.com • 800.4.STAHLS • Fax: 800.346.2216
International: StahlsInternational.com • 586.772.5551
Canada: StahlsCanada.com • 800.521.5255

SUBLIMATED TWILL / SIMSTITCH™



PREHEAT BOTTOM PAD

Before application, Stahls' suggests lowering the top platen for 60 seconds.

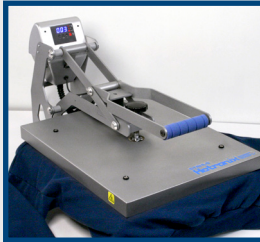

PREHEAT SUBSTRATE

for 10 seconds, prior to application, to remove moisture and wrinkles.



POSITION APPLIQUE

and place release paper over design. Each application requires a new release paper; which is provided.



HEAT APPLY—

Temp: 300°F; 150°C
Time: 20 seconds
Pressure: medium
#6 on Hotronix®

Recommended Fabrics:

- 100% cotton
- 100% polyester
- Poly/cotton blends
- Poly/foam & cotton caps
- Fleece

Due to the combination of fabrics, weaves, coatings and dyes used in the textile industry, Stahls' recommends and provides samples of our materials and medias for testing.

Accessories Required:

Release Paper
included with order

Care Instructions:

Machine wash warm or cold using mild detergent. Do not bleach. Tumble dry low.

All technical information and recommendations are based on tests we believe to be reliable. However, we cannot guarantee performance for conditions not under manufacturer's control. Before using, please determine the suitability of product for its intended use. The user assumes all risk and liability whatsoever in connection with the use of this product. Seller's and manufacturer's only obligation shall be to replace such quantity of the product proved to be defective by manufacturer.

Hotronix are trademarks & ® trademarks of Stahls' ID Direct™ with one or more patents or patents pending.

© Stahls' ID Direct™ 2012 - All International Rights Reserved