

Wall-Frog™ Removable Fabric


1) Load Wall-Frog™ into your print/cut device with the fabric side up. If using a Roland printer/cutter, set the downforce to 110gf with a 45° blade and perform a test cut. Adjust force accordingly until the fabric cuts cleanly.



2) When all settings are correct, send your job to the printer. When printing is complete, remove your graphic and place it on your work surface.



3) Weed the excess fabric away from the graphic by peeling at a 45° angle. Use a weeder to remove smaller pieces if necessary.

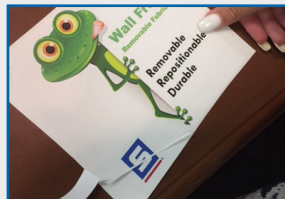

4) Decide where you want to place your decal. Make sure your application surface is completely CLEAN and DRY before starting the application. Do not apply on freshly painted, roughly textured surfaces, or wall with low VOC paints. Begin to remove the graphic from the backing.



5) Carefully apply the graphic to the surface in the center first, then let the rest of the design touch from center out until the whole graphic is sticking to the wall or surface.



6) Adhere the graphic to the wall by pressing firmly with your hand. Use a squeegee, starting from the center and going out past the edges, to smooth out any air bubbles or wrinkles.



All technical information and recommendations are based on tests we believe to be reliable. However, we cannot guarantee performance for conditions not under manufacturer's control. Before using, please determine the suitability of product for its intended use. The user assumes all risk and liability whatsoever in connection with the use of this product. Seller's and manufacturer's only obligation shall be to replace such quantity of the product proved to be defective by manufacturer. CAD-CUT, CAD-COLOR, Solutions & Hotronix are trademarks & ® trademarks of Stahls™ with one or more patents or patents pending. © Stahls™ 2015 - All International Rights Reserved